LASER

SPK-S10
User Manual

2.0
SPEAKER SYSTEM

For technial support please visit
http://www.laserco.com.au
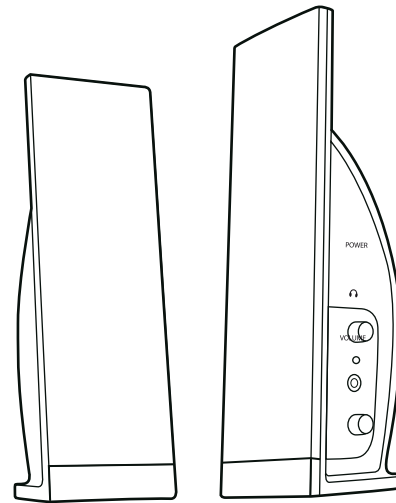
Please read carefully before use


SPK-S10 User Manual

SPECIFICATION

Frequency response 120Hz – 20KHz   Speaker : 5090 x 2 FULL RANGE
Power Input: 240VAC/50Hz   Audio input: 3.5 mm stereo jack
Dimensions: 67mm (W) X 200mm (H) X 58mm (D).

INSTALLATION AND OPERATION GUIDE

A: Before connecting be sure that all components are switched off.
B: Insert the 3.5mm stereo jack in to the audio out socket of the PC sound card,
   MP3 Player or other Audio Devices.
C: Plug the AC power cable in to the power socket.
D: Turn the volume control to minimum and then switch the speaker system on
   by pressing the POWER button. The LED will light up.
E: Adjust the volume knob to a desirable volume level.

POWER
Headphone Jack
VOLUME
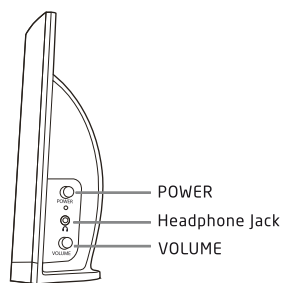
CONNECTIONS

(CD/ MP3/ Radio/ Computer......) To Audio Source
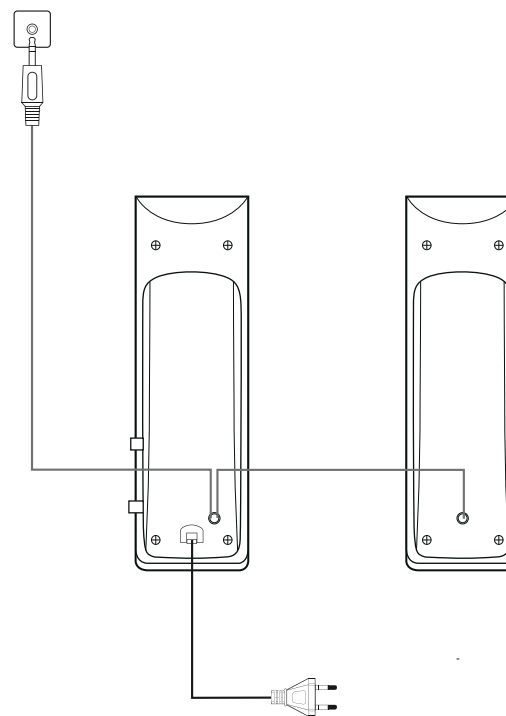
*Disconnect AC power cord from the power outlet when not in use.